



## Assembly instructions 9110.120

Attention! The lamps for this suspension must be only LED because of the acrilic component.


1 - Insert the steel cables into the adjusters. Insert the cable clamps into the steel cables and smash them with pliers;

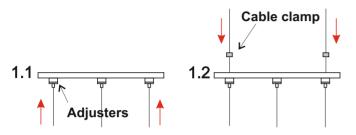


**3** - Connect the electrical wires; Fix the base with the metal buttons and adjust the steel cables with the desired lenght;

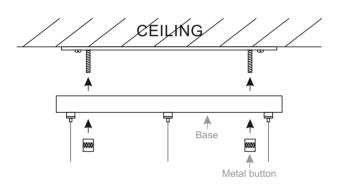


5 - Place the acrilic carefully;

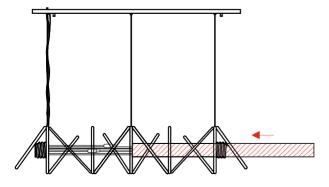


2 - Fix the fixing bar to the ceiling. (Screws not included. Please use screws suitable for the material of the roof).



**4** - Uscrew the metal piece (1) and take the metal box (2) out;

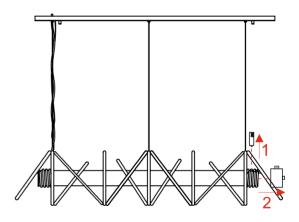

**6** - Put the metal box (ø60 with 40mm) in the same place as the beginning. Conclude with the metal piece .

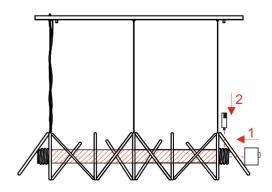

These drawings are property of Castro Lighting and its designers.

They cannot be reproduced, manufactured, shared or copied - either in hole or parts - without expressed authorization. All rights reserved by law.